

❖ 即時監控影像 ❖

- 1.登入使用名稱：user
- 2.登入密碼：user1234

❖ 登入後畫面顯示方式 ❖

- 1.進入畫面，
到右下方有個「三角方框」的按鍵，點選即可看到影像
- 2.若上述方式無反應，
請下載右上方「Download plugin」程式安裝即可

XVR

Channel Bit Rate: K/s

- enter
- Channel 02
- Channel 03
- CAMERA04
- CAMERA05
- CAMERA06
- CAMERA07
- CAMERA08
- CAMERA09
- CAMERA10
- CAMERA11
- CAMERA12
- CAMERA13
- CAMERA14
- CAMERA15
- CAMERA16
- Channel 17
- Channel 18
- Channel 19
- Channel 20
- Channel 21
- Channel 22
- Channel 23
- Channel 24



PTZ



- Presets1
- Presets2
- Presets3
- Presets4
- Presets5
- Presets6
- Presets7
- Presets8
- Presets9
- Presets10
- Presets11
- Presets12
- Presets13
- Presets14
- Presets15
- Presets16
- Presets17
- Presets18
- Presets19
- Presets20
- Presets21

點選此鍵，即可顯示畫面



XVR

Channel Bit Rate: K/s

- enter
- Channel 02
- Channel 03
- CAMERA04
- CAMERA05
- CAMERA06
- CAMERA07
- CAMERA08
- CAMERA09
- CAMERA10
- CAMERA11
- CAMERA12
- CAMERA13
- CAMERA14
- CAMERA15
- CAMERA16
- Channel 17
- Channel 18
- Channel 19
- Channel 20
- Channel 21
- Channel 22
- Channel 23
- Channel 24



若下圖三角型方框鍵無反應，
就請下載安裝此程式即可



PTZ



- Presets1
- Presets2
- Presets3
- Presets4
- Presets5
- Presets6
- Presets7
- Presets8
- Presets9
- Presets10
- Presets11
- Presets12
- Presets13
- Presets14
- Presets15
- Presets16
- Presets17
- Presets18
- Presets19
- Presets20
- Presets21

